



User Instructions
for
Original, Vogue, Viva,
Whirlpool Systems

Please quote the bath number below with any after sales service enquiry.

Bath Number- BW _____

Bronte Whirlpools Ltd
Unit 2B, Acre Park
Dalton Lane, Keighley
BD21 4JH

Tel 01535 662778
Fax 01535 603483
E-mail Info@brontewhirlpools.co.uk
Website www.brontewhirlpools.co.uk

User Instructions

Thank you for purchasing a quality whirlpool system. In order to get the full benefit from this product and have many years trouble free service please follow the simple instructions below.

Whirlpool Bathing Safety

If you suffer from a heart condition or are pregnant consult your doctor before taking a whirlpool bath.

DO NOT allow children to bathe in the whirlpool unattended.

Slow moving/weak elderly or disabled persons should take care when using a whirlpool bath.

DO NOT allow hair to become entangled with the suction fitting (the largest fitting in the bath). If necessary bathe using a shower cap.

DO NOT take a whirlpool after a large meal or after drinking alcohol.

DO NOT over do it! Start by having the whirlpool on for a short period and build up gradually each bath time.

DO NOT bathe in hot water above 40 Degrees Centigrade (104 F)

DO NOT use large quantities of bubble bath, it will cause excessive foaming.

Bath Care

FILLING - Always run cold water in to the bath before filling with hot water.

CLEANING - Clean immediately after use with warm soapy water and dry. Never use gritty or abrasive cleaners. Multi-surface bathroom cleaners can damage the surface of the bath. Slight scratches and lime scale can be removed with metal polish.

Warning-Solvents such as paint stripper, nail varnish remover, concentrated bath oils and disinfectants will damage the bath surface.

The bath can be damaged by burning cigarettes. The use of cleaning materials not specified by the manufacture can result in damage to the bath or whirlpool system.

Care and Maintenance

DO NOT use bath oils, these will coat the pipes and cause a build up of grease.

DO NOT run the whirlpool system without sufficient water in the bath, this will cause damage to the pump.

DO NOT clean the whirlpool fittings with abrasive or multi-surface cleaners as this can attack the chrome fittings. Use only mild soapy water and a soft cloth. Micro fibre E-Cloths can be used.

MAINTAIN your whirlpool system using a specialist whirlpool cleaning product.

The use of cleaning materials not specified by the manufacture can result in damage to the bath of whirlpool system.

Testing R.C.D.

An R.C.D. MUST be fitted to the electrical supply it is an essential safety feature. If one has not been fitted DO NOT use the bath and consult a qualified electrician. (See installation instructions for details.)

Test at least once a month as follows.

1. Turn the R.C.D. to the ON position.
2. Press the 'TEST' button. The R.C.D. should trip to the 'OFF' position. (If the R.C.D. fails to trip off consult a qualified electrician.)
3. Switch on as normal when the bath is to be used.

Pump Immobiliser

The pump immobiliser is an option on the Original and Phizzio whirlpool systems and standard on the Vogue, Vogue Elite, Viva and VivaLux. The pump immobiliser prevents the whirlpool system from running until water has reached the correct bathing depth.

Original Range Whirlpool System

The Phizzio whirlpool system has a single on/off button and two air controls.

On/Off Button

To start the whirlpool system press and release the round button. To stop the whirlpool system press and release the round button again. Use a short definite push for best results.




Air Controls

To adjust the turbulence of the whirlpool system turn the air control knob. One control is for the body jets. Each can be adjusted independently. A quarter of a turn will cover the full range of adjustment.

DO NOT run the whirlpool system without sufficient water in the bath (fill to 75mm above the jets). This will damage the pump and invalidate your guarantee. When the bath is not in use turn off at the R.C.D. or isolator switch to prevent accidental switching on of the pump.

Adjustable Back and Foot Jets

The Bronte back and foot jets can be adjusted by rotating the bezel until the desired pressure is reached.

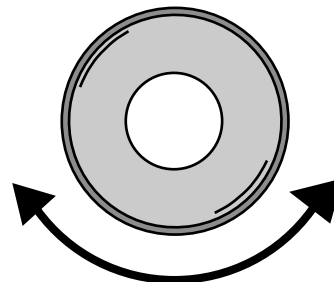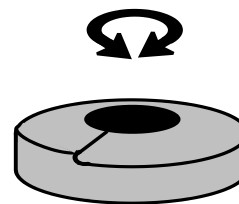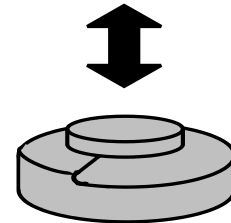

Optional Extras

Chromotherapy AquaLight

The Bronte AquaLight is operated by an on/off switch fitted on the bath. Press once to turn the light on and again to turn the light off. To change Colour, turn the light on and off (double press). The light goes through each colour in sequence. The last option cycles through all the colours automatically.

To enjoy this relaxing effect, turn down the bathroom light and let the warm glow and whirlpool wash away the stress of the day.

Pump Immobiliser

The pump immobiliser prevents the whirlpool system from running until water has reached the correct bathing depth. This prevents accidental switching on of the pump when the bath is empty or when the water level is too low.

High Power Pump

A high power pump can be specified. This is used on larger baths or when extra jets are used. The operation of the whirlpool is the same.

Vogue Range Whirlpool System

The Vogue whirlpool systems are operated from a multi-function touch pad.

Each Button has a function.

On/Off Button.

Press once to Start and again to Stop the whirlpool. The system is fitted with a safety pump immobiliser that prevents the whirlpool from running without sufficient water in the bath.

Bath full Reminder.

Whilst the bath is empty, press and hold down the on/off button until the beeper sounds then release the button.

Fill the bath with water (to 75mm above the jets). The 'Water Level' light will flash to indicate the bath fill reminder has been activated. When a certain level is reached the beeper will sound.

Press any key to silence the beeper. (Note: the bath fill reminder is not a substitute for checking the bath whilst filling).

Water Level Indication Light.

When no water is present the centre Light is Red. If the bath full reminder has been activated the light will flash. When water is present the centre light turns Green.

Power Adjustment.


To adjust the power of the whirlpool jets press pulse button. The whirlpool will cycle up and down, when the desired massage setting is reached press the pulse button again. Use the +/- button for fine adjustment.

For the pulsing action, press the pulsing button to start and press again to stop.

Press to start the pulsing massage press again to stop. Use the


Aqua Light (Optional).

Press to turn on, press again to turn off. To change Colour, turn the light on and off (double press). The light goes through each colour in sequence. The last option cycles through all the colours automatically.

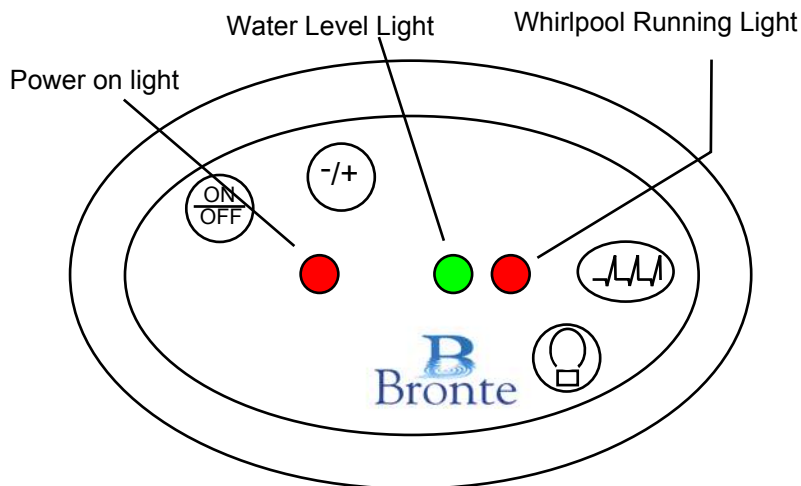

Adjustable Back and Foot Jets

The Bronte back and foot jets can be adjusted by rotating the bezel until the desired pressure is reached.

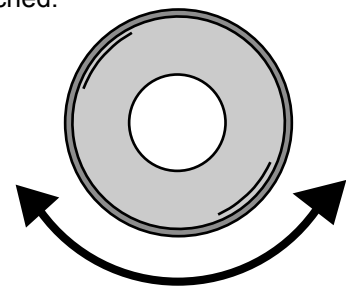

Pump Immobiliser

The Pump Immobiliser prevents the whirlpool system from running until water has reached the correct bathing depth. This prevents accidental switching on of the pump when the bath is empty or when the water level is too low.

Chromotherapy AquaLight (Optional)

The Bronte AquaLight is operated by an on/off button on the keypad. Press once to turn the light on and again to turn the light off. To change Colour, turn the light on and off (double press). The light goes through each colour in sequence. The last option cycles through all the colours automatically.

To enjoy this relaxing effect, turn down the bathroom light and let the warm glow and whirlpool wash away the stress of the day.

Viva Range Whirlpool System

The Viva whirlpool systems are operated from a multi-function touch pad with LED display. This tells you information and asks you what you would like to do.

The Viva has six basic items in the main menu:-

Fill - reminds you when the bath is full

Bathmenu - controls all the bathing functions

Clock - displays the time

Timer - sets the beeper alarm to go off after a pre-set length of time. (The Timer can be set on or off)

Light - Turns the light on and off and changes colour.

Demo - will demonstrate all the functions on the bath in turn

This may appear complicated, but once mastered is very easy to use.

A guided tour of your Viva Whirlpool System

If the bath has not been used for some time the control goes to sleep. When you see 'Bronte' and the system name press any key to 'wake up' the whirlpool.

If the bath is empty [Fill off] will be displayed. The whirlpool system defaults to fill reminder off.

The fill reminder is a device which detects when water has reached the level sensor on the side of the bath which is close to the final bathing depth. When this level is reached an audible 'beep' will sound. Note this device is a useful reminder and not a substitute for watching the bath.

We will turn on the fill reminder.

Press (Select) the display will read [Fill on?] press (OK)

Now start filling the bath. If you want to turn the fill reminder off :-

Press (Select) the display will read [Fill off?] press (OK) (We will leave the fill reminder on.)

When the bath reaches the level sensor the beeper will sound.

To stop the beeper press any key. The bath should be filled to 7cm (3") above the highest jet.

Starting the whirlpool and adjusting the power

To Start the whirlpool system press the On button. After a few seconds the pump will prime and the whirlpool will start to run.


To increase the turbulence press the (+) Key. Each press of the key will increase the turbulence one step. If you hold the key down then the turbulence will increase until the top setting is reached. As you press the key you will notice a square at the right of the screen. This shows the amount of turbulence in the bath.

To decrease the turbulence press the (-) Key.

The bath starts on the lowest setting.

Adjustable Back and Foot Jets

The Bronte back and foot jets can be adjusted by rotating the bezel until the desired pressure is reached.

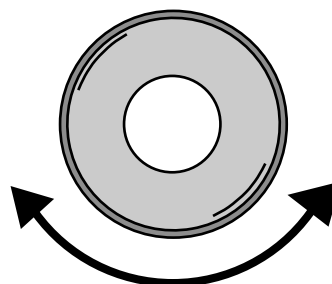

Moving around the functions

The (Menu) button takes you around all the functions of the touch pad. Each time you press (Menu) the next function will be displayed and you have the choice to operate that function or not. Follow the functions on the display card which you can use as an easy reference guide. At any time you can press (Menu) and cycle through the functions.

With the screen displaying [Bath] press the (Menu) button. The [time] will be shown on the screen. (The adjustment and operation of each function will be given under its own heading).

Press (Menu) again and [Timer] will be displayed followed by [Light] and finally [Demo].

We will run the Demo this will show all the functions of the whirlpool system. With [Demo] in the screen press (Select). You will be asked if you want to run the demo [Run?] now press (OK)

The demonstration sequence will operate as each function is reached the function will be displayed on the screen. Press any key to stop the demo. Now you have seen what the whirlpool system can do lets look at each function in turn.

Bathing Functions [Bath Menu]

Bath Menu allows you to adjust the action of the whirlpool system and choose from five pre-set massage settings.

When [Bath Menu] is displayed press (Select).

[Side] will be displayed, pressing the (+) or (-) button will adjust the turbulence of the side jets.

Press (Select) and [Back/Foot] will be displayed pressing the (+) or (-) button will adjust the turbulence of the back and foot jets. Press (Select), [Lagoon] is displayed this is the first of the five

pre-set massage actions. To turn the lagoon action on press (OK). You will notice a small tick next to the name to show which massage action has been selected. Each press of (Select) will take you to the next massage setting. Although the massage name is shown in the display to turn it on you simply press (OK). If you want to turn off the pre-set massage settings and go back to a conventional whirlpool press (Select) until [Clear] is reached and press (OK). This can also be achieved by pressing the (ON) button.

The Pre-set Massage actions are as follows:-

[Lagoon] A gentle relaxing massage.

[Oasis] A relaxing massage with a slow pulsating rhythm.

[Beach] An ebb and flow effect.

[Surf] Let the breakers flow around in a more vigorous and stimulating effect.

[Cyclone] From the highest setting to the lowest setting gives you a good workout.

As a guide Hot water will tend to relax and ease away aches and pains, warm water will tend to invigorate but remember don't over do it!

Clock [Time]

The Time is displayed in Hours and Minutes on the 24 hour clock. To set the Hours press (Select) [Set Hrs] and use the (+) and (-) buttons to adjust up or down. When the correct hour has been reached press (OK). Now set minutes [Set Mins] again use the (+) and (-) buttons until the correct time is reached and press (OK). The clock is now set.

Timer [TimerOff]

The Timer can be set from one to sixty minutes. If the timer is set for 30 minutes, after this time a beeper will sound. To turn the timer on Press (Select) you will be asked [TimerOn?]. Press (OK). To turn off the timer Press (Select) [TimerOff], press (OK). To set the amount of time required. Press (Select) until you reach [Set Mins] now use the (+) and (-) key to select up to 60 minutes. Once the time has been chosen press (OK).

The Timer is now Set.


Temperature Display [Temp]

This displays the temperature of the bath water, for an accurate reading the whirlpool system must be running. The temperature can be displayed in Celsius or Fahrenheit. To change from one to the other press (Select).

AquaLight

Use the (Menu) button until [Light] is displayed. Press (Select) to turn the light on. The next time you press (Select) you will turn the Light off. To change Colour, turn the light on and off (double press Select). The light goes through each colour in sequence. The last option cycles through all the colours automatically.

To enjoy this relaxing effect, turn down the bathroom light and let the warm glow and whirlpool wash away the stress of the day.

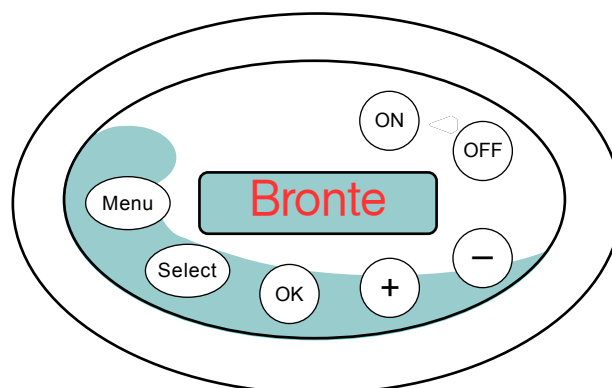

Whirlpool Touchpad

Combination Systems Viva Combi

Where a Whirlpool and Air Spa are combined on to one bath all the functions can be operated from a single touch pad.

The systems can be operated independently or together.

If both systems are running and the whirlpool (ON) button is pressed any adjustment made to the (+) and (-) will only effect the whirlpool.

If the Spa (ON) button is pressed then any adjustments made to the (+) and (-) will only effect the Spa.

If a pre-set massage is being operated by one system, and the second system is started, the second will be added to the massage. If either (OFF) button is pressed then the relevant system stops leaving one system running.

For the detailed operation of the Viva Spa see user instructions. However both systems have very similar functions.

